


FAQ

1. Why is the airflow reduced?

During cutting operations, pollutants such as oil, smoke, and dust will inevitably be produced. These pollutants may be sucked into the air pump and accumulate inside it. Excessive accumulation can cause insufficient airflow, dirt, or blockage.

To ensure the working performance of the air pump, please clean or replace the filter sponge regularly.

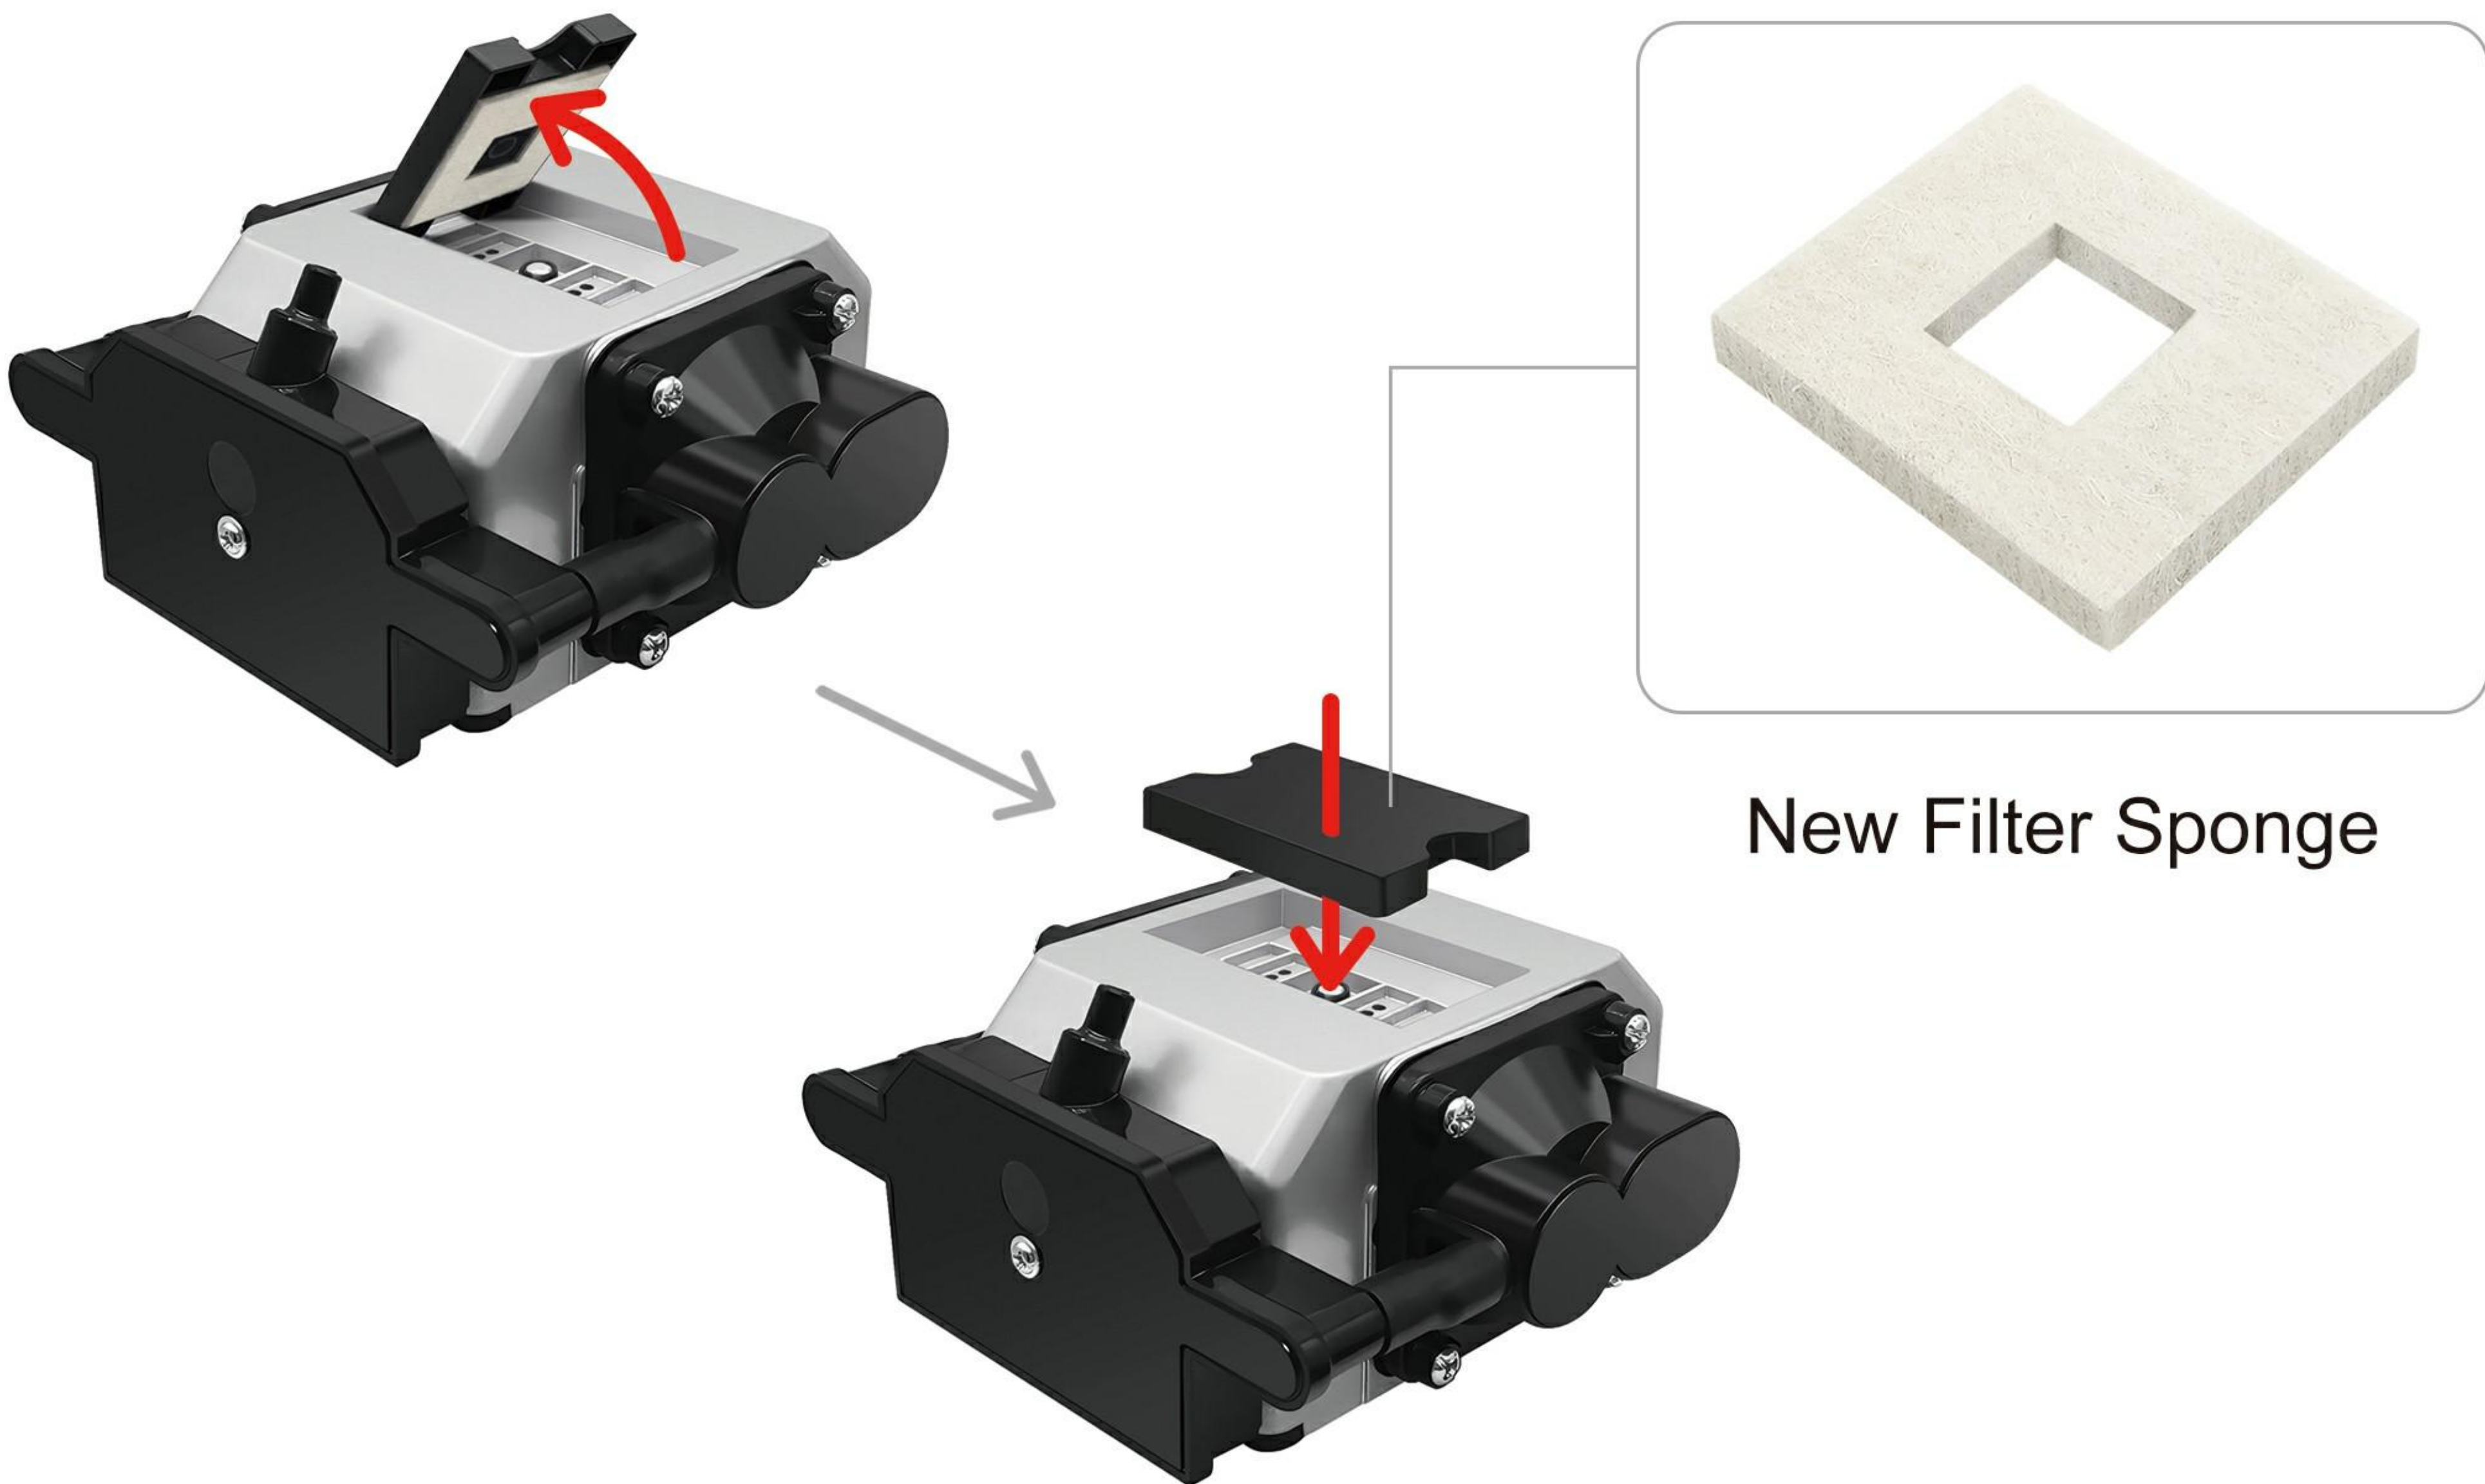


MADE IN CHINA

LASERTREE

AIR PUMP

USER MANUAL

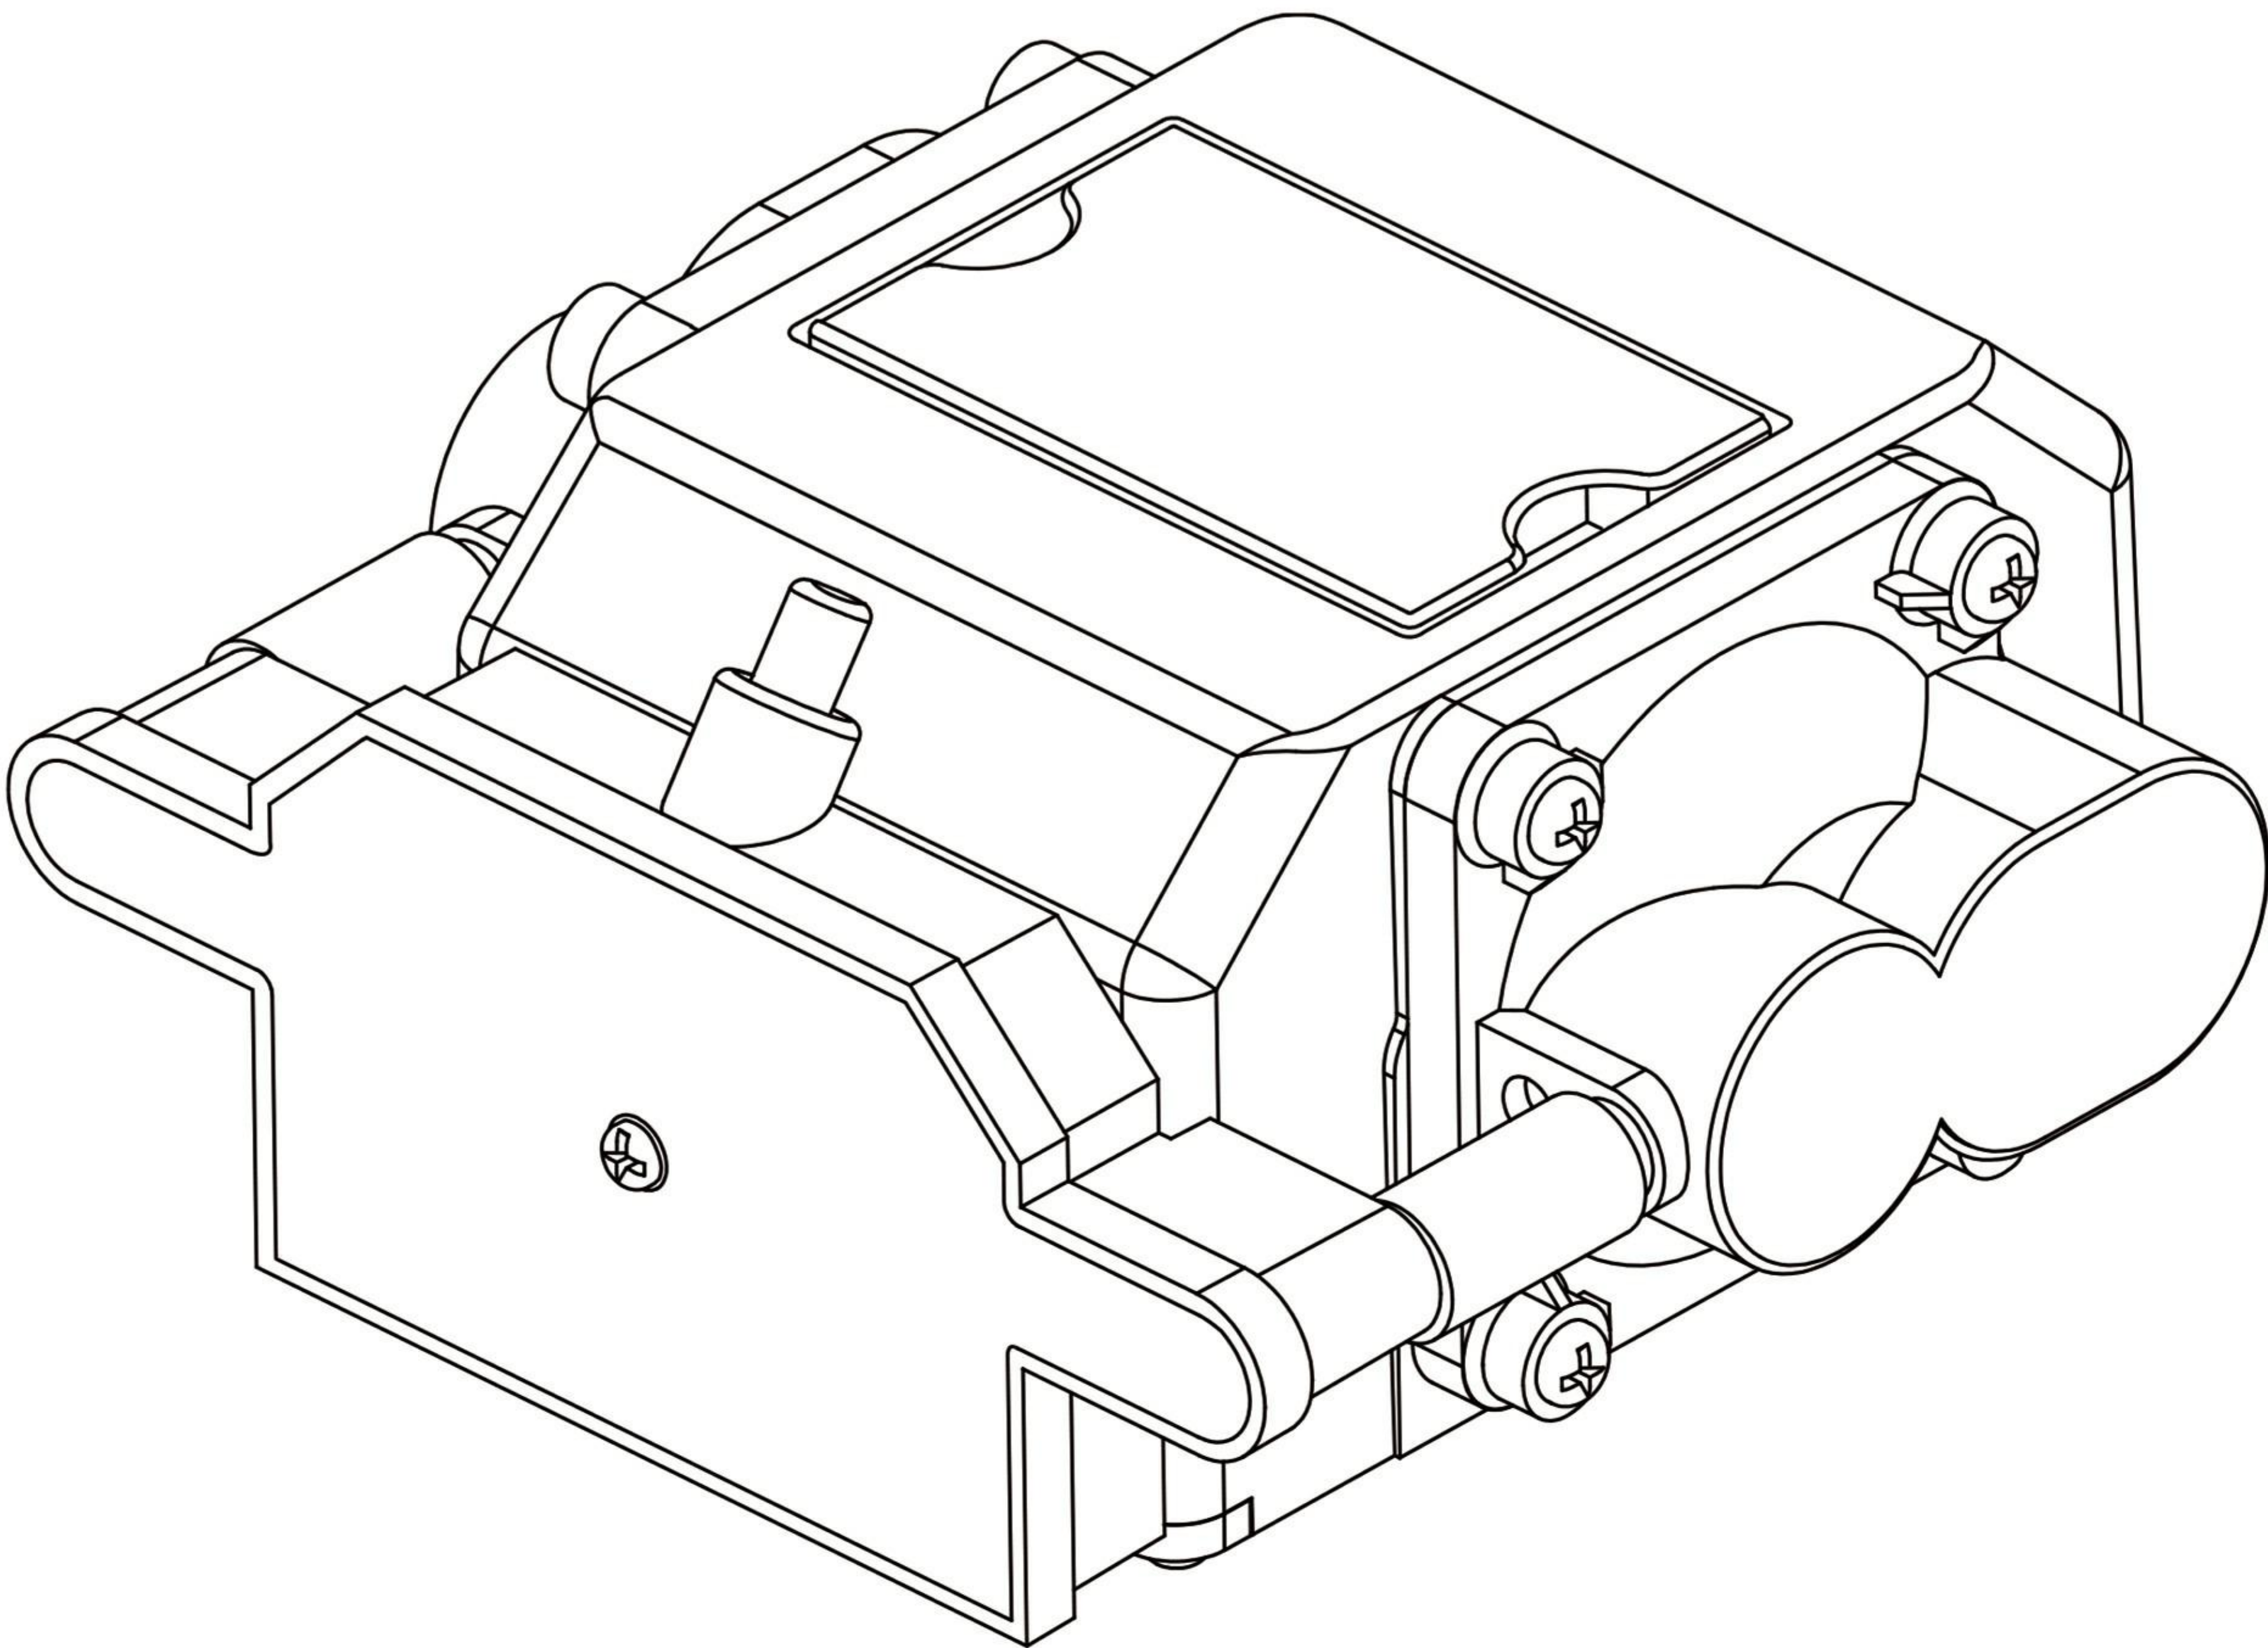

Packing list

LT-AP-MP56



Air pump x1



24V1A Power adapter x1




1.5m Air tube x1



Filter sponge x2

About air pump

Product	Air pump	Flow	$\geq 26\text{L/min}$
Model	LT-AP-MP56	Pressure	$\geq 28\text{kPa}$
Voltage	DC24V	Environmental temperature	-20°C - 40°C
Current	950mA	Environmental humidity	<90%

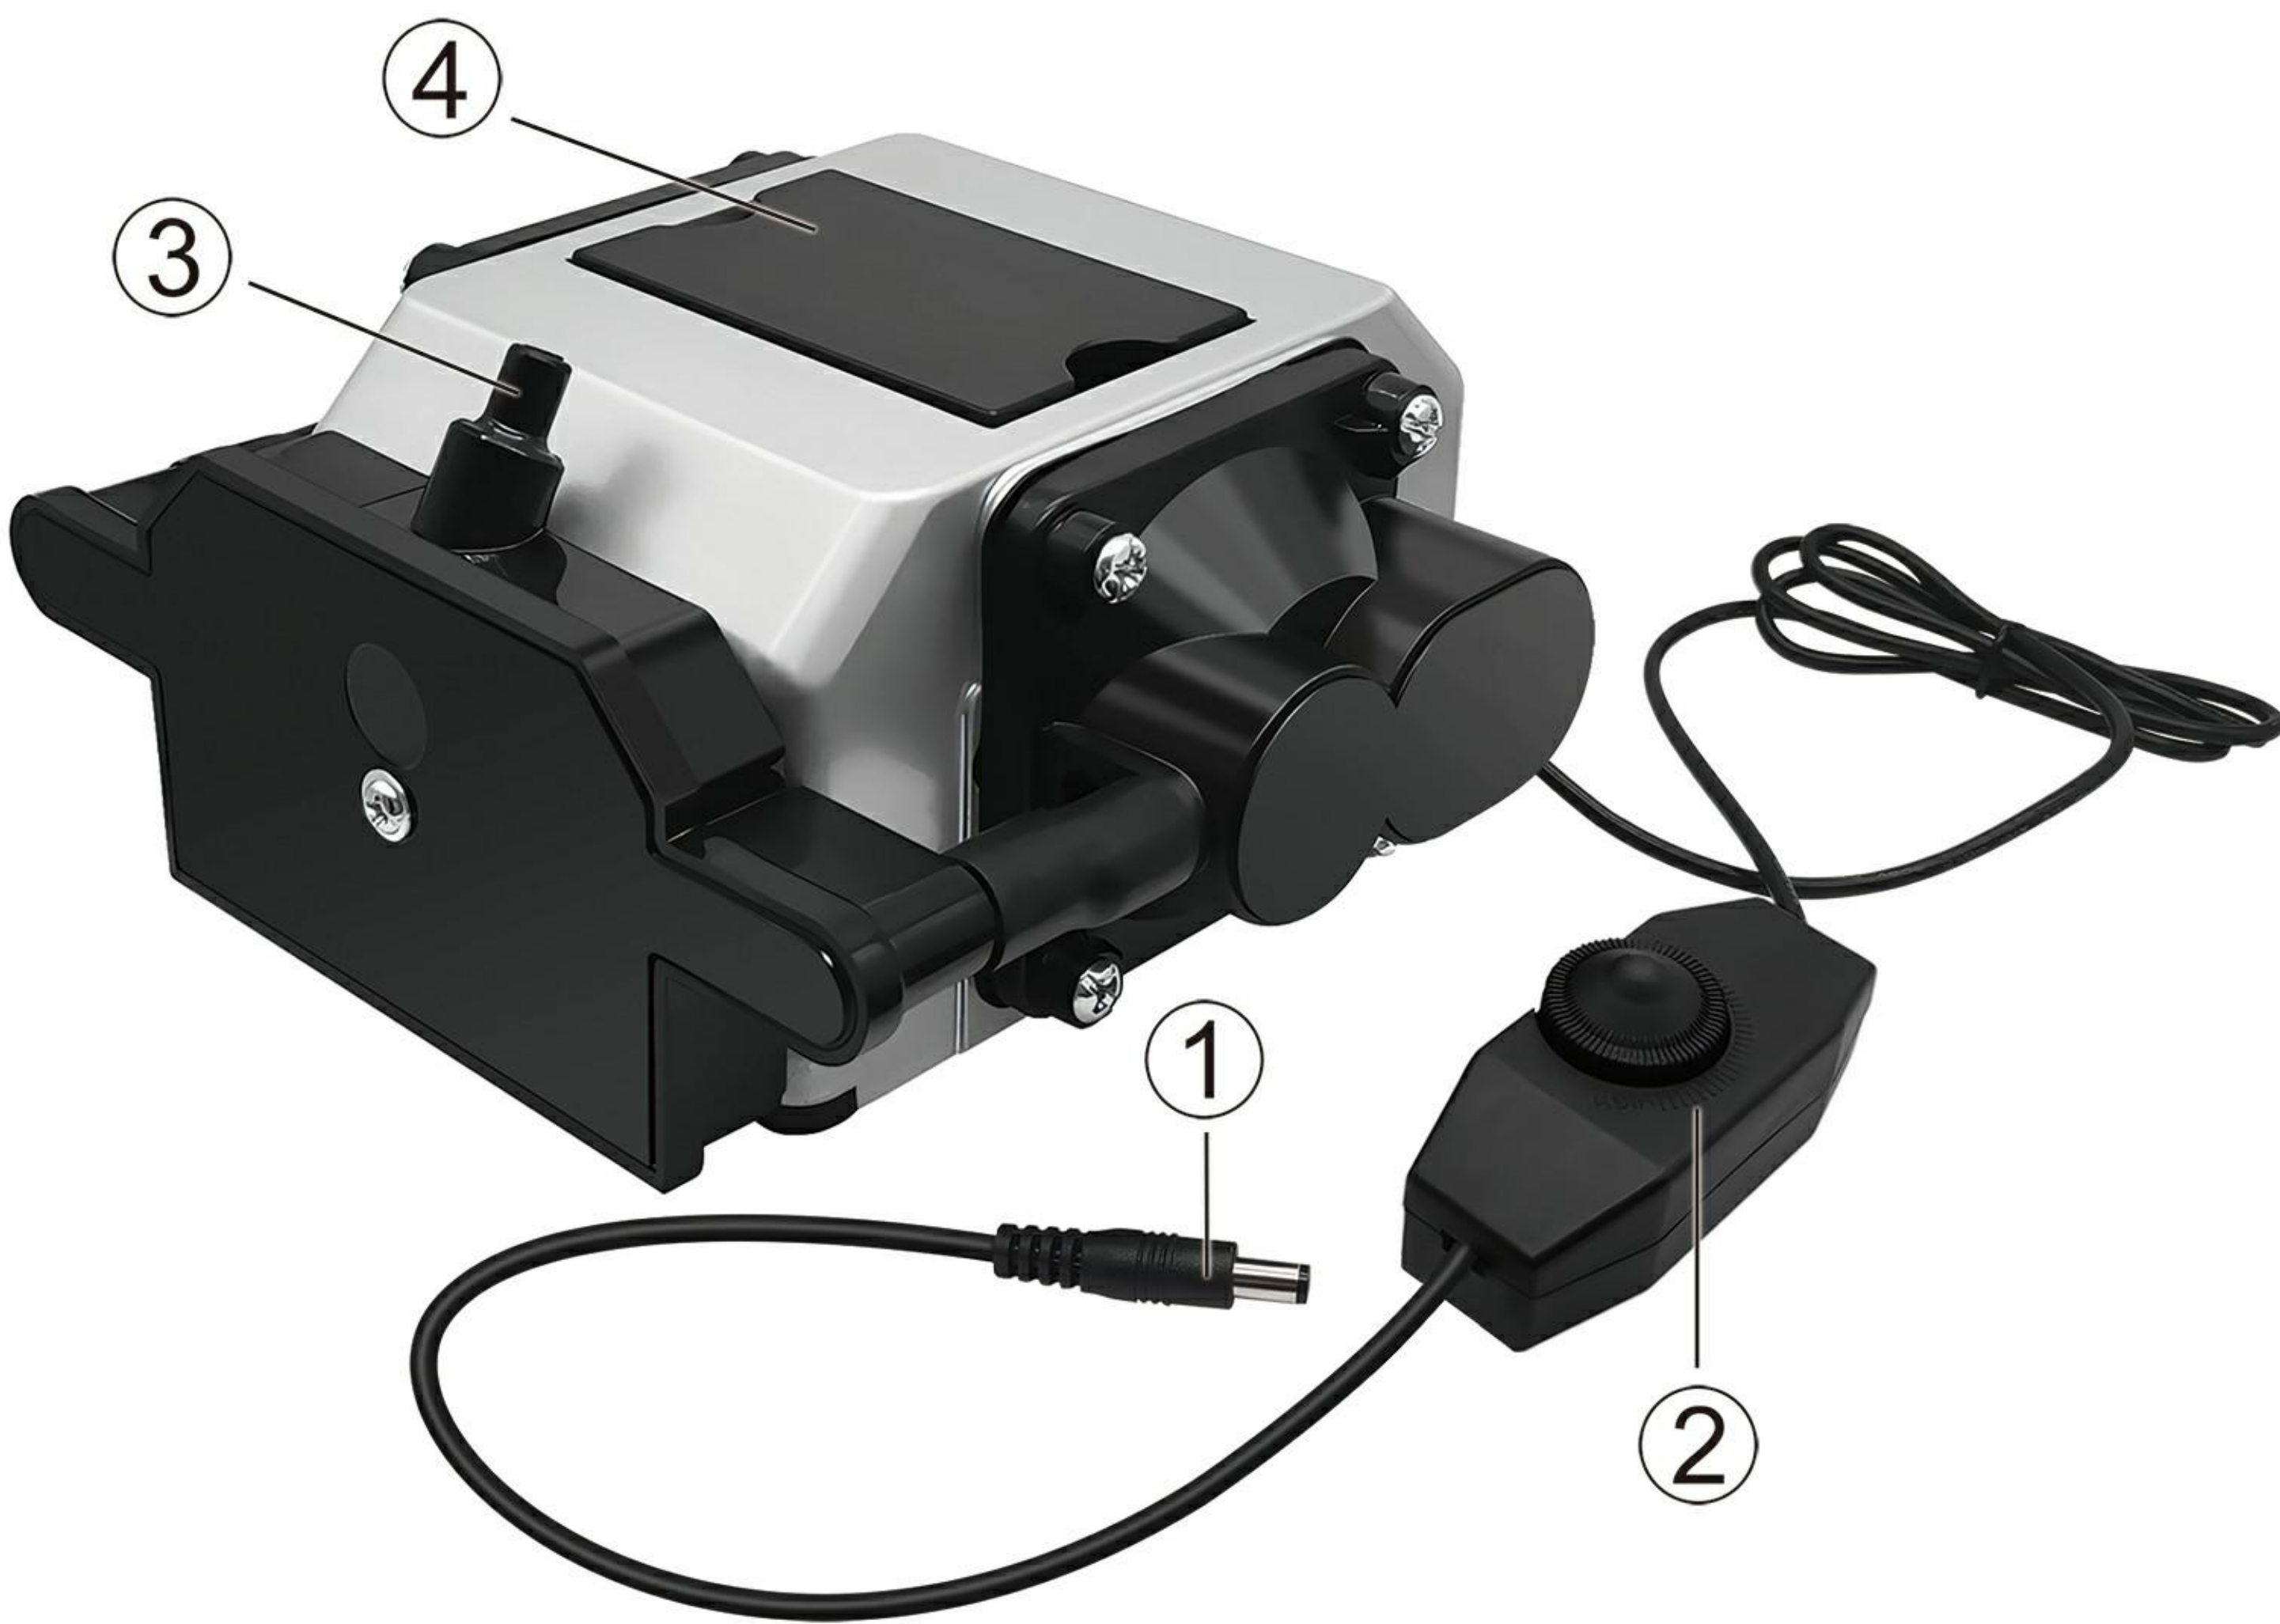

- ① Power port
- ② Adjustable airflow
- ③ Air tube port
- ④ Filter sponge